

ON/OFF regulators, 4-20 mA input, 2 relays and acoustic alarm, for moisture, pressure, level, etc.



Devices designed to display, process control and regulation, with 4-20 mA input type for sensors and converters. Both outputs with SPDT relays can be configured for two independent stages, 2 related stages, neutral zone, or also as 1 stage + alarm.

Index

- 1 - Versions and references
- 2 - Technical data
- 3 - Instalación
- 4 - Front panel functions
- 5 - Adjustment and configuration
- 6 - Menus, parameters and messages
- 7 - Parameter transfer
- 8 - Relay operation and control
- 9 - Maintenance
- 10 - Warnings

1- VERSIONS AND REFERENCES

MODEL	RELAYS	POWER SUPPLY, 50/60 Hz
AKO-14532	8 A, 250 V, cos φ=1, SPDT	230 V ~ ±10%
AKO-14534	8 A, 250 V, cos φ=1, SPDT	120 V ~ +8% -12%


2- TECHNICAL DATA

Configuration range: from -999 to 999
 Resolution, Set Point and differential: (0,1 from -99,9 to 99,9) (1 from -999 to 999)
 Accuracy: ± 1 %
 Maximum input power: 3 VA
 Working ambient temperature: 5 °C to 50 °C
 Storage ambient temperature: -30 °C to 70 °C
 Control device classification: Independent mounting, with characteristic of automatic operation Type 1.B action, to be used in a clean situation, logical medium (software) class A and continuous operation.
 Double insulation between the power supply, secondary circuit and relay output.
 Allocated pulse voltage: 800 V
 Pressure ball test temperature:
 Accessible parts: 75 °C
 Parts that position active elements: 125 °C
 Voltage and current declared by the EMC tests: 207 V, 16 mA
 Current of radio jamming suppression test: 270mA

3- INSTALLATION

The controller must be installed in a place protected from vibrations, water and corrosive gases, and where ambient temperature does not surpass the value specified in the technical data.
 In order for the controllers to have IP65 protection, the gasket must be properly installed between the apparatus and the perimeter of the panel cut-out where it is to be fitted.

3.1 Fastening units for panel mounting:

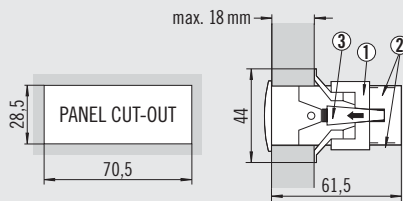


To fix the unit, place the fasteners 1 over the sliders 2 as shown in the figure. Move the fasteners in the direction of the arrow. By pressing tab 3 fasteners may be moved in the opposite direction of the arrow.

3.2 Connection:

See diagram on the unit rating plate.
 The probe or 4-20 mA output converter and its leads should NEVER be installed in ducting together with power, control or power supply wiring.
 The power supply circuit must be connected with a minimum 2 A, 230 V switch located close to the unit. Power supply cables must be H05VV-F 2x0,75 mm² or H05V-K 1x0,75 mm². Section of connecting wires for relays contacts must range from 1 mm² to 2.5 mm².

4- FRONT PANEL FUNCTIONS

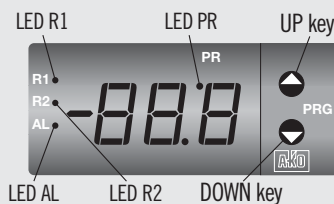

UP key Press once to cancel the alarms, but they remain displayed (optional by parameter AtA). When pressed for at least 5 seconds, the SP1 Set Point of Relay R1 is displayed. In programming, it increases the displayed value.

DOWN key Press once to cancel the alarms, but they remain displayed (optional by parameter

AtA). When pressed for at least 5 seconds, the SP2 Set Point of Relay R2 is displayed. In programming, it decreases the displayed value.

LED R1: Relay 1 indicator enabled
 LED R2: Relay 2 indicator enabled


LED AL: Alarm indicator enabled
 LED PR: Flashing, programming phase

5- ADJUSTMENT AND CONFIGURATION

It must only be programmed or modified by personnel who are fully conversant with the equipment operation and possibilities.

5.1 Set Point configuration.

The factory SET POINT default value is 0.
 - Press key for at least 5 seconds to DISPLAY SET POINT in Relay R1 or key for Relay R2. It displays the CURRENT SET POINT value and LED "PR" starts flashing.
 - Press or keys to CHANGE SET POINT to the required value.
 - Press + keys simultaneously to ACCEPT THE NEW SET POINT. The display returns to the VALUE DISPLAY status and LED "PR" stops flashing.

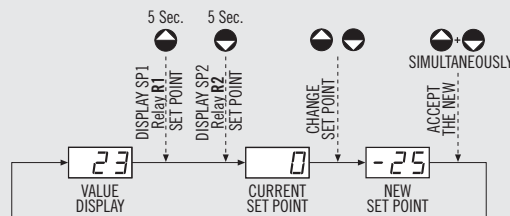

5.2 Parameter configuration

Level 1 Menus


- Press + keys simultaneously for at least 10 seconds. The LED "PR" will start flashing, LEVEL 1 MENUS programming has been accessed and the first menu "Po1" is displayed.
 - Press key to access the next menu and key to return to the previous one.
 - Pressing + keys simultaneously in the last menu EP, the controller returns to the VALUE DISPLAY status and LED "PR" will stop flashing.
 When PA is displayed, the PASSWORD programmed in the PAr menu PAS parameter must be entered to access LEVEL 1 MENU programming.
 - Press + keys simultaneously. 0 will be displayed to ENTER PASSWORD.
 - Press or keys to CHANGE NUMBER and DISPLAY PASSWORD programmed.
 - Press + keys simultaneously to ACCEPT PASSWORD. The first menu "Po1" will be displayed.

Level 2 Parameters

- In the desired menu of LEVEL 1 MENU, press keys + simultaneously. LEVEL 2 PARAMETERS programming is accessed. The first parameter of the selected menu is displayed on the screen.
 - Press key to access the next parameter and key to return to the previous one.
 - Pressing + keys simultaneously in the last parameter EP, the controller returns to LEVEL 1 MENU.

Level 3 Values

- To DISPLAY CURRENT VALUE of any parameter, select the required one and press + keys simultaneously. Once it is displayed, you can CHANGE VALUE pressing or key.
 - Press + keys simultaneously to ACCEPT THE NEW VALUE. The programming returns to LEVEL 2 PARAMETERS.

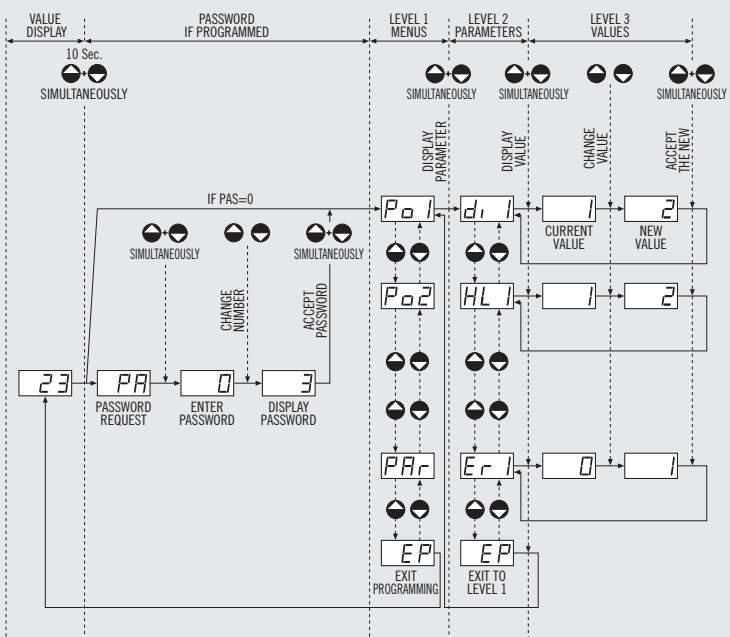

NOTE: If no key is pressed for 25 seconds in either of the previous steps, the controller will automatically return to the VALUE DISPLAY status without modifying any of the parameter values.

6- MENUS, PARAMETERS AND MESSAGES

Values in the Def. column are factory-set.

In programming, it must be taken into consideration that the parameters and values displayed depend on the option selected in the CFo configuration menu o2C parameter.

Level 1 Menu and Description						
Po1	Level 2	R1 Relay Parameter Output	Values	Min.	Def.	Max.
	Level 3	Description				
	di1	R1 and SP1 Differential (Hysteresis)		-50	1	50
	HL1	Set Point upper limit SP1 of R1 (It cannot be set above this value)		LL1	999	999
	LL1	Set Point lower limit SP1 of R1 (It cannot be set below this value)		-999	-999	HL1
	HC1	Type of operation R1: (0=Direct) (1=Reverse)		0	1	1
	Er1	R1 relay status with faulty sensor: 0=OFF 1=ON		0	0	1
	EP	Exit to Level 1				
Po2	Level 2	R2 Relay Parameter Output	Values	Min.	Def.	Max.
	Level 3	Description				
	di2	R2 and SP2 Differential (Hysteresis)		-50	1	50
	HL2	Set Point upper limit SP2 of R2 (It cannot be set above this value)		LL2	999	999
	LL2	Set Point lower limit SP2 of R2 (It cannot be set below this value)		-999	-999	HL2
	HC2	Type of operation R2: (0=Direct) (1=Reverse)		0	1	1
	Er2	R2 relay status with faulty sensor: 0=OFF 1=ON		0	0	1
	EP	Exit to Level 1				
CFo	Level 2	Configuration Parameters	Values	Min.	Def.	Max.
	Level 3	Description				
	o2C	R2 Relay output ratio type: (1=Two independent stages) (3=Neutral Zone) (2=Two related stages) (4=1 Stage + alarm)		1	1	4
	HES	Maximum scale value		-999	100	999
	LES	Minimum scale value		-999	0	999
	bES	Blocking the scale between HES and LES (0=Scale free) (1=Scale blocked)		0	0	1
	CAn	Sensor calibration (Offset)		-20	0	20
	rES	Display mode: (0=Integers) (1=One decimal)		0	0	1
	toF	Delay time for the relays to switch ON (sec.)		0	0	250
	toN	Delay time for the relays to switch OFF (sec.)		0	0	250
	EP	Exit to Level 1				
ALA	Level 2	Alarm Parameters	Values	Min.	Def.	Max.
	Level 3	Description				
	ACo	Alarm configuration: (0=Absolute) (1=Related to set point SP1 of R1)		0	0	1
	ALt	Minimum alarm: (Limited by AHT)		-999	-999	AHT
	AHT	Maximum alarm: (Limited by ALt)		ALt	999	999
	Adi	Alarm differential		1	1	20
	AdE	Alarm delay from the moment at which they must be enabled (min)		0	0	250
	Ado	Alarm delay at start-up (min)		0	0	250
	AtA	Optional cancellation of output alarms by pressing once a key. (0 = Allows to cancel the output alarms) (1 = Not allows to cancel the output alarms)		0	0	1
	EP	Exit to Level 1				
InP	Level 2	Digital Input Parameters	Values	Min.	Def.	Max.
	Level 3	Description				
	ICF	Digital input configuration: (0=Disabled) (1=External alarm) (2=R1 Relay set point SP1 variation) (3=Inversion type of operation HC1)		0	0	3
	IPo	Digital output status inversion: (0=Closed Contact) (1=Open Contact)		0	0	1
	IdY	Digital input enabling delay (min)		0	0	120
	USI	R1 Relay set point SP1 variation if ICF=2		-999	0	999
	tSI	USI variation length (min)		0	0	254
	EP	Exit to Level 1				
PAr	Level 2	General Parameters	Values	Min.	Def.	Max.
	Level 3	Description				
	CYt	R1 Relay output switching off frequency (h)		0	6	120
	oFt	R1 Relay output switching off time (min)		0	0	120
	PdE	Initial parameters: (1=YES, configure to "Def" and exit programming)		0	0	1
	PtR	Transfer parameters: (0=Disabled) (1=Send) (2=Receive)		0	0	2
	PAS	Password to parameters and information		0	0	250
	CAd	Address for units with communication		0	0	250
	PU	Programme version (Information)				
	EP	Exit to Level 1				
	EP	Exit programming				


MESSAGES	
AH	The Sensor value exceeds the parameter programmed in AHT
AL	The Sensor value is lower than the parameter programmed in ALt
EAL	Active digital input
E1	Sensor failure (Open circuit, crossed, out-of-scale value)
- - -	Value > 999
EE	Memory failure
PA	Password request to enter programming parameters

NOTE: When the time parameters are modified, the new values are applied when the current cycle is completed. In order for it to have an immediate effect, switch the controller off and then on again.

7- PARAMETER TRANSFER

AKO-14918 portable server, with no power supply, in which parameters programmed in a powered controller can be copied by transfer. Parameters can be transferred again from the server to other identical powered controllers. **Disconnect the unit of the supply before connecting or disconnecting the AKO-14918 portable server.**


To transfer parameters, other servers are available for controllers that must be programmed identically in high quantity without power supply.

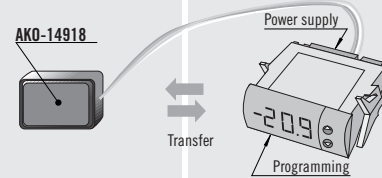

8- R1 AND R2 RELAY OPERATION AND CONTROL

SP1 = R1 Relay set point

SP2 = R2 Relay set point

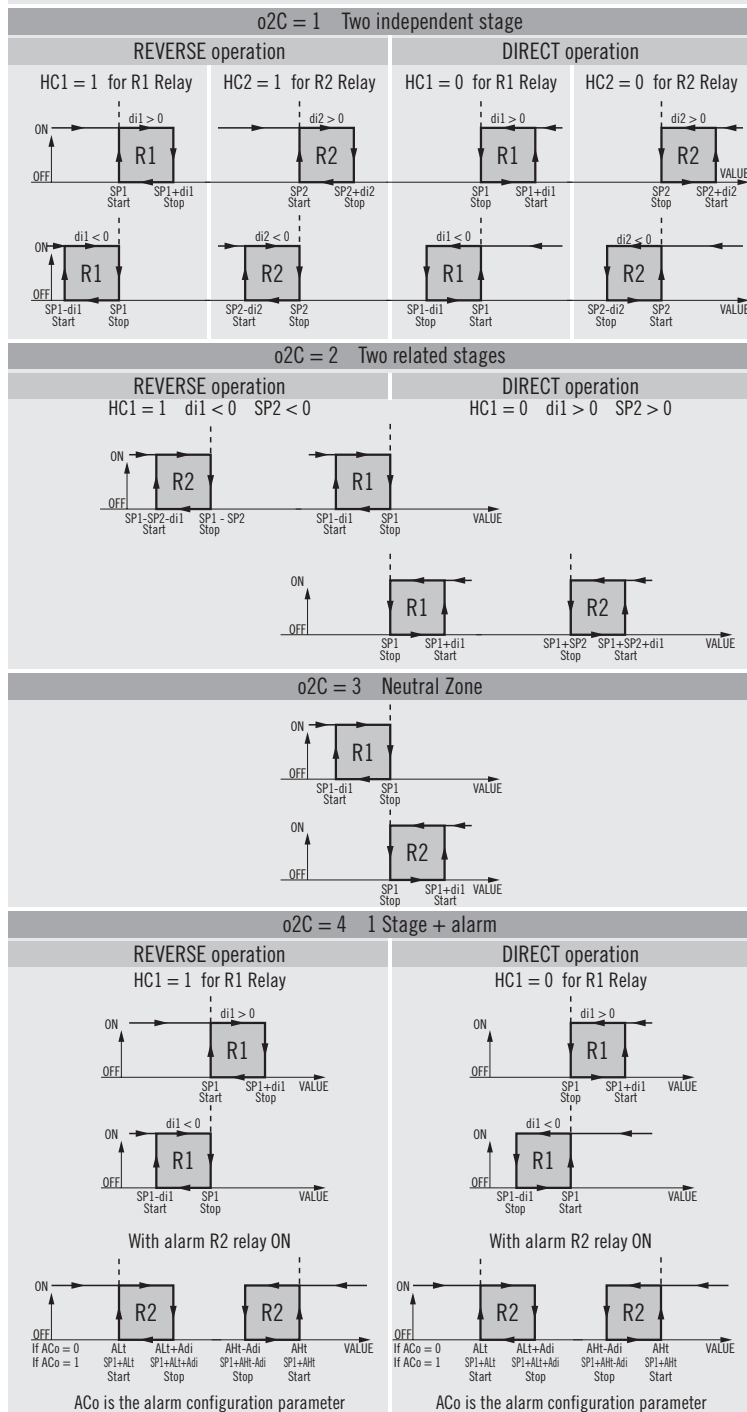

9- MAINTENANCE

Clean the controller surface with a soft cloth, soap and water. Do not use abrasive detergents, petrol, alcohol or solvents.

10- WARNINGS

The use of the unit without observing the manufacturer's instructions may alter its safety qualification.

To ensure correct operation of the apparatus, only sensors supplied by AKO must be used.